



Note:

- Sealant must be installed between Hardie™ Axent™ Trim and window flange in VH wind zones
- Sealant must be applied between the head flashing and Axent Trim in VH and EH wind zone.