



- Note:
- Sealant must be installed between Hardie™ Axent™ Trim and window flange in VH wind zones
 - Sealant must be applied between the head flashing and Hardie™ Axent™ Trim in VH and EH wind zone