



Note:

- * When HomeRAB™ Pre-Cladding/RAB™ Board is used flashing tape to be applied to the entire window opening.
- * Also refer to Figure 116 NZBC clause E2/AS1 for head and jamb details
- * Sealant must be applied between head flashing and window flange VH and EH wind zones and SED wind pressures
- * Alternatively, the head flashing can be formed with stop ends as per E2/AS1