



- Sealant must be applied between head flashing and Hardie™ Axent™ Trim in VH and EH wind zones
- Site cut edges to be primed