



Note:

- Sealant must be installed between head flashing and Trim in VH wind zones
- Alternatively, the head flashings can be formed with stop ends as per E2/AS1