



**Note:**

- Sealant must be installed between head flashing and window flange in VH wind zones. Refer Figure 71 of E2/AS1
- Site cut edges to be primed