



**Note:**

- Sealant must be installed between head flashing and window flange in VH and EH wind zones and SED pressures
- Alternatively, the head flashings can be formed with stop ends as per E2/AS1
- Refer to Figure 22 for sealing end battens to head flashing
- Site cut edges to be primed