



Note:

- Alternatively, the head flashings can be formed with stop ends as per E2/AS1
- Sealant must be installed between Trim and window flange in VH and EH wind zones and SED pressures