



- Note:
- Sealant must be installed between head flashing and Trim in VH and EH wind zones and SED pressures
 - Flashing materials must be selected based on environmental exposure, refer to NZS 3604 and Table 20 of NZBC E2/AS1