



Note:  
Sealant must be installed between head flashing and Trim in VH and EH wind zones and SED pressures