



- Sealant must be applied between head flashing and Trim in VH and EH wind zones and SED wind pressures
- Site cut edges to be primed