



Note:

- Sealant must be installed between head flashing and Axent Trim in VH and EH wind zones and SED pressures