



- Sealant must be applied between head flashing and Trim in VH wind zone
- Site cut edges to be primed