



- Sealant must be applied between head flashing and Trim in VH and EH wind zones and SED wind pressures
- Site cut edges to be primed

Note: Site cut edges to be primed

jhl\_sttm\_r\_039

jhl\_sttm.rvt