



- Sealant must be applied between head flashing and Trim in VH wind zones
- Site cut edges to be primed