



Note:  
Sealant between head flashing and window flange in VH and EH wind zones. Refer Figure 71 of E2/AS1