



**Notes:**

- Sealant must be installed between head flashing and window flange in VH and EH wind zones and SED projects. Refer to Figure 71 of E2/AS1