


Batten fixing - 40 x 2.8mm Hardie™ Flex nails @ max 800mm crs. Refer to batten specification for durability requirements.

* **Note:** Horizontal packers are not to be installed on the sill trimmer within 100mm of the window opening edge.

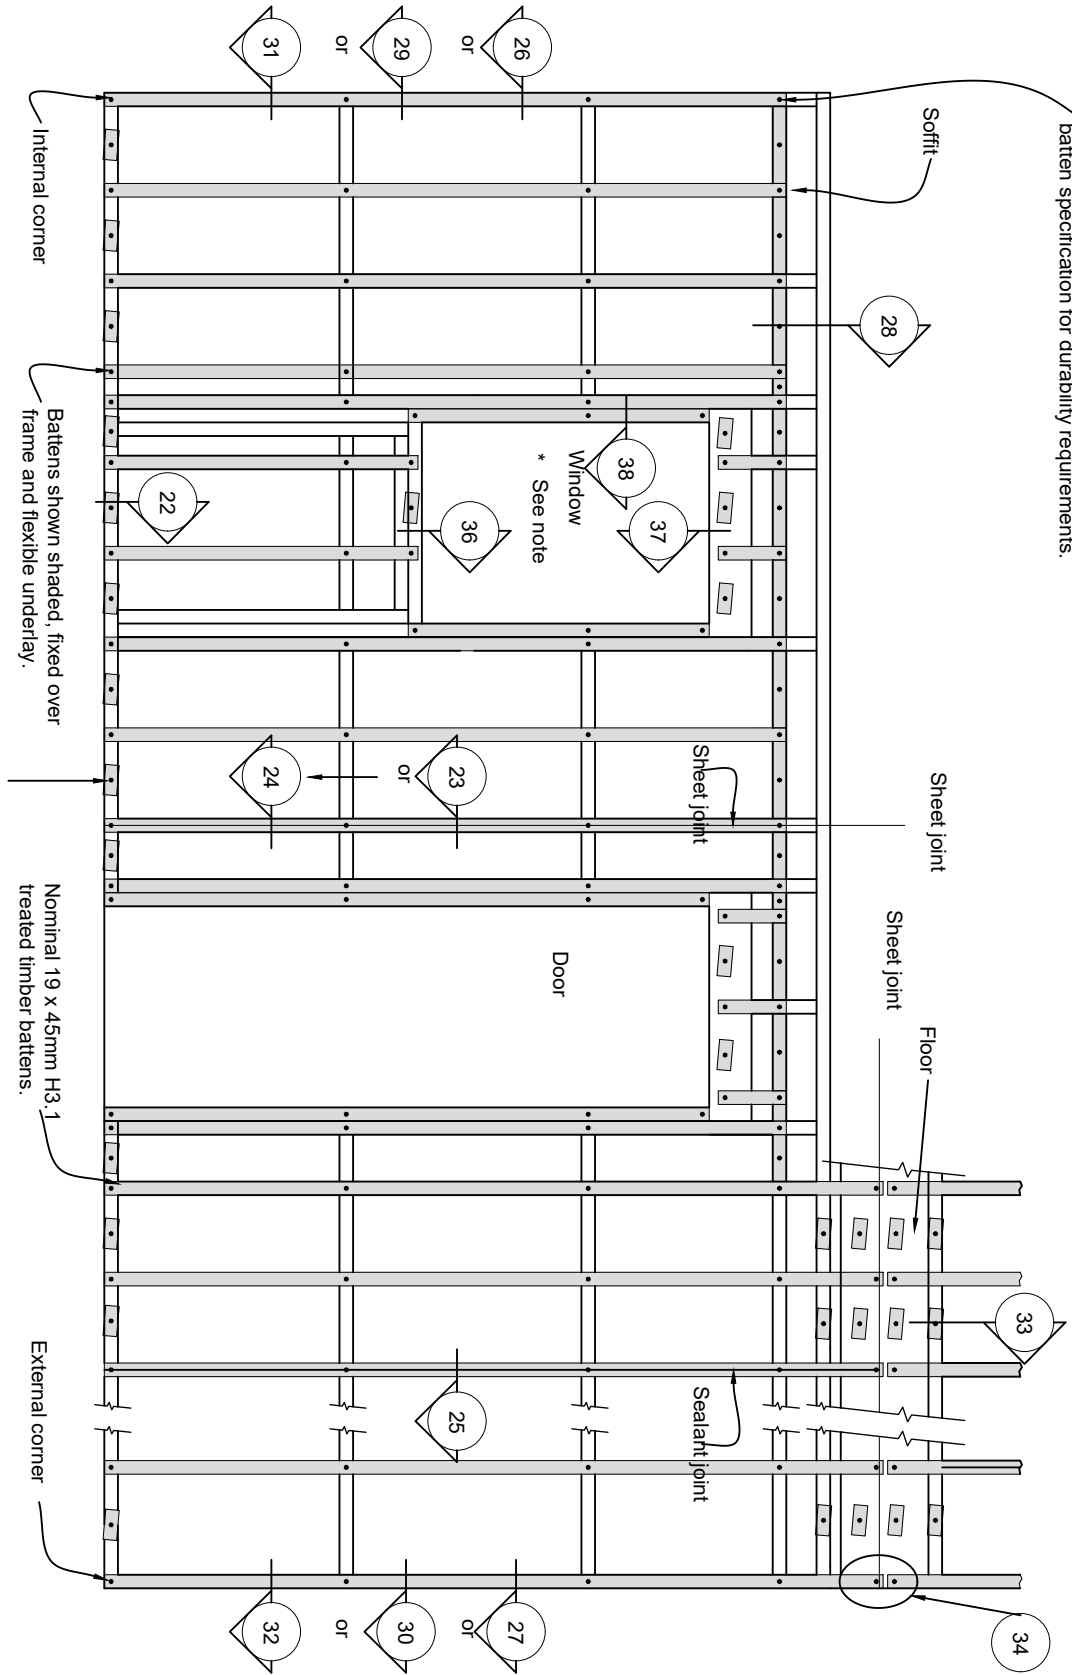

Note: If studs are placed at 400mm centres no intermediate battens are required and nogs may be placed at max 1200mm centres. 100mm long packers will be required between battens as shown

Nominal 19 x 45mm H3.1 treated timber horizontal packers x 100mm long - fix with one nail central

Note: Horizontal packers must be set to a fall of 5° min where shown

Note! Section notations refer to Figure numbers.

WALL ELEVATION

fig19_jhl_flex_c_strc_fram.dwg