


Batten and Flashing Tape Application Prior to Metal Flashing Fixing

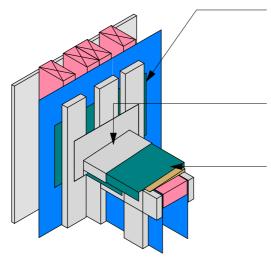


Flexible flashing tape dressed up and adhered to HomeRAB[™] Pre-Cladding/ RAB[™] Board/flexible underlay behind battens

Rivet and seal capping to saddle flashing across top

Flexible flashing tape to extend min 50mm down face of battens

Cladding omitted for clarity

Saddle Flashing Application Prior to Cladding and Cap Flashing Fixing

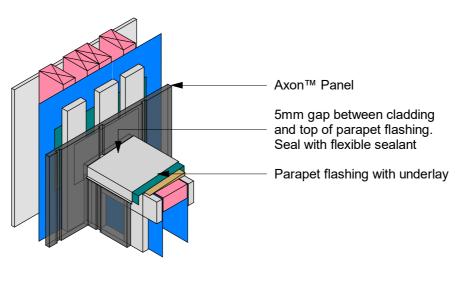

jhl_axon24_c_048

Axon[™] Panel Hardie[™] CLD[™] Batten With Flexible Underlay jhl_axon24_c_ktaltd.rvt March 2024 Scale:

ENCLOSED DECK BALUSTRADE TO WALL JUNCTION

Figure 48