


Flashing tape full width of the moulding leg. Minimum 100mm long

Moulding box portion cut at 20° to 40° downwards

Prior to butting mouldings together, apply flexible sealant between the seal

Moulding box portion cut at 20° to 40° downwards

Flashing tape full width of the moulding leg. Minimum 100mm long

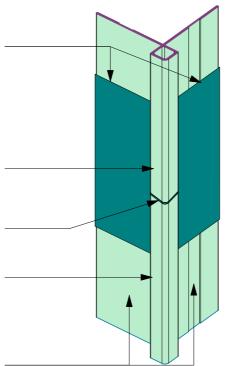

jhl\_axon24\_d\_026

jhl\_axon24\_d\_ktaltd.rvt March 2024

Scale: