


Batten and Flashing Tape Application Prior to Metal Flashing Fixing

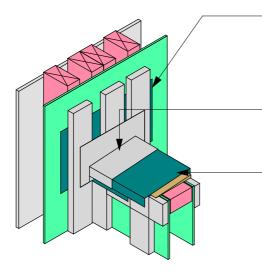


Flexible flashing tape dressed up and adhered to HomeRAB[™] Pre-Cladding/ RAB[™] Board/flexible underlay behind battens

Rivet and seal capping to saddle flashing across top

Flexible flashing tape to extend min 50mm down face of battens

Cladding omitted for clarity

Saddle Flashing Application Prior to Cladding and Cap Flashing Fixing

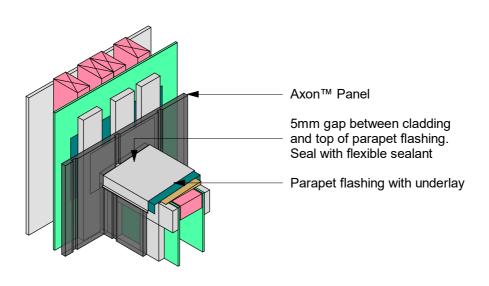

jhl_axon24_r_048



Axon[™] Panel On Hardie[™] CLD[™] Structural Cavity Batten with HomeRAB[™] Pre-Cladding/RAB[™] Board ENCLOSED DECK BALUSTRADE TO WALL JUNCTION jhl_axon24_r_ktaltd.rvt March 2024 Scale:

Figure 48