


50 x 50mm uPVC corner underflashing

Timber cavity battens

Flexible underlay

Face nail this side first

Weatherboards this side to run through to stud and to be fixed first

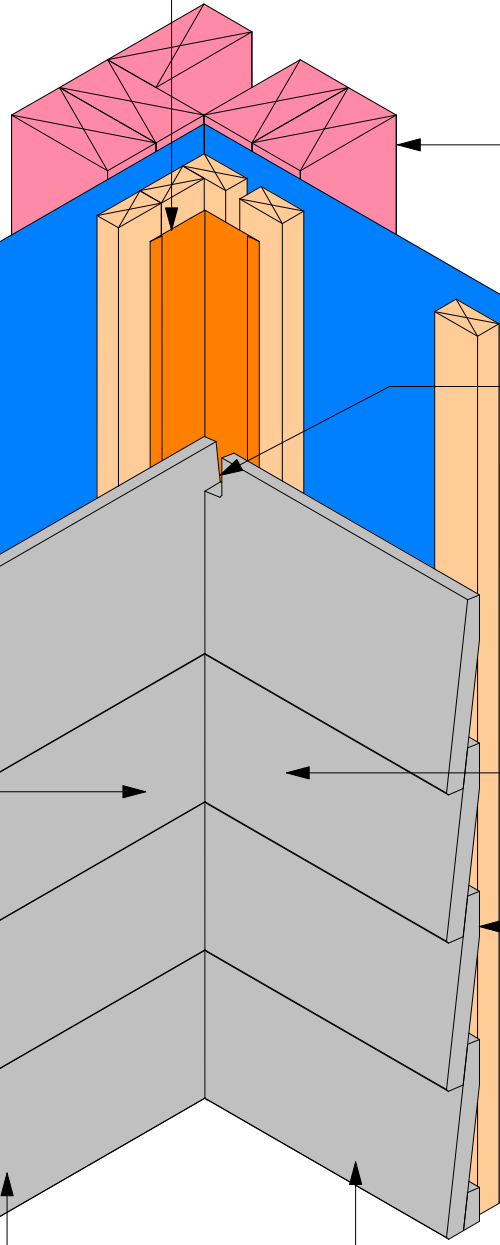

Note double stud

Accurately notch top of weatherboard this side to match incoming weatherboard above

Face nail this side to outer stud

Linea™ Weatherboard

Weatherboards this side to be scribed into other weatherboard. Prime and seal joint between boards with sealant