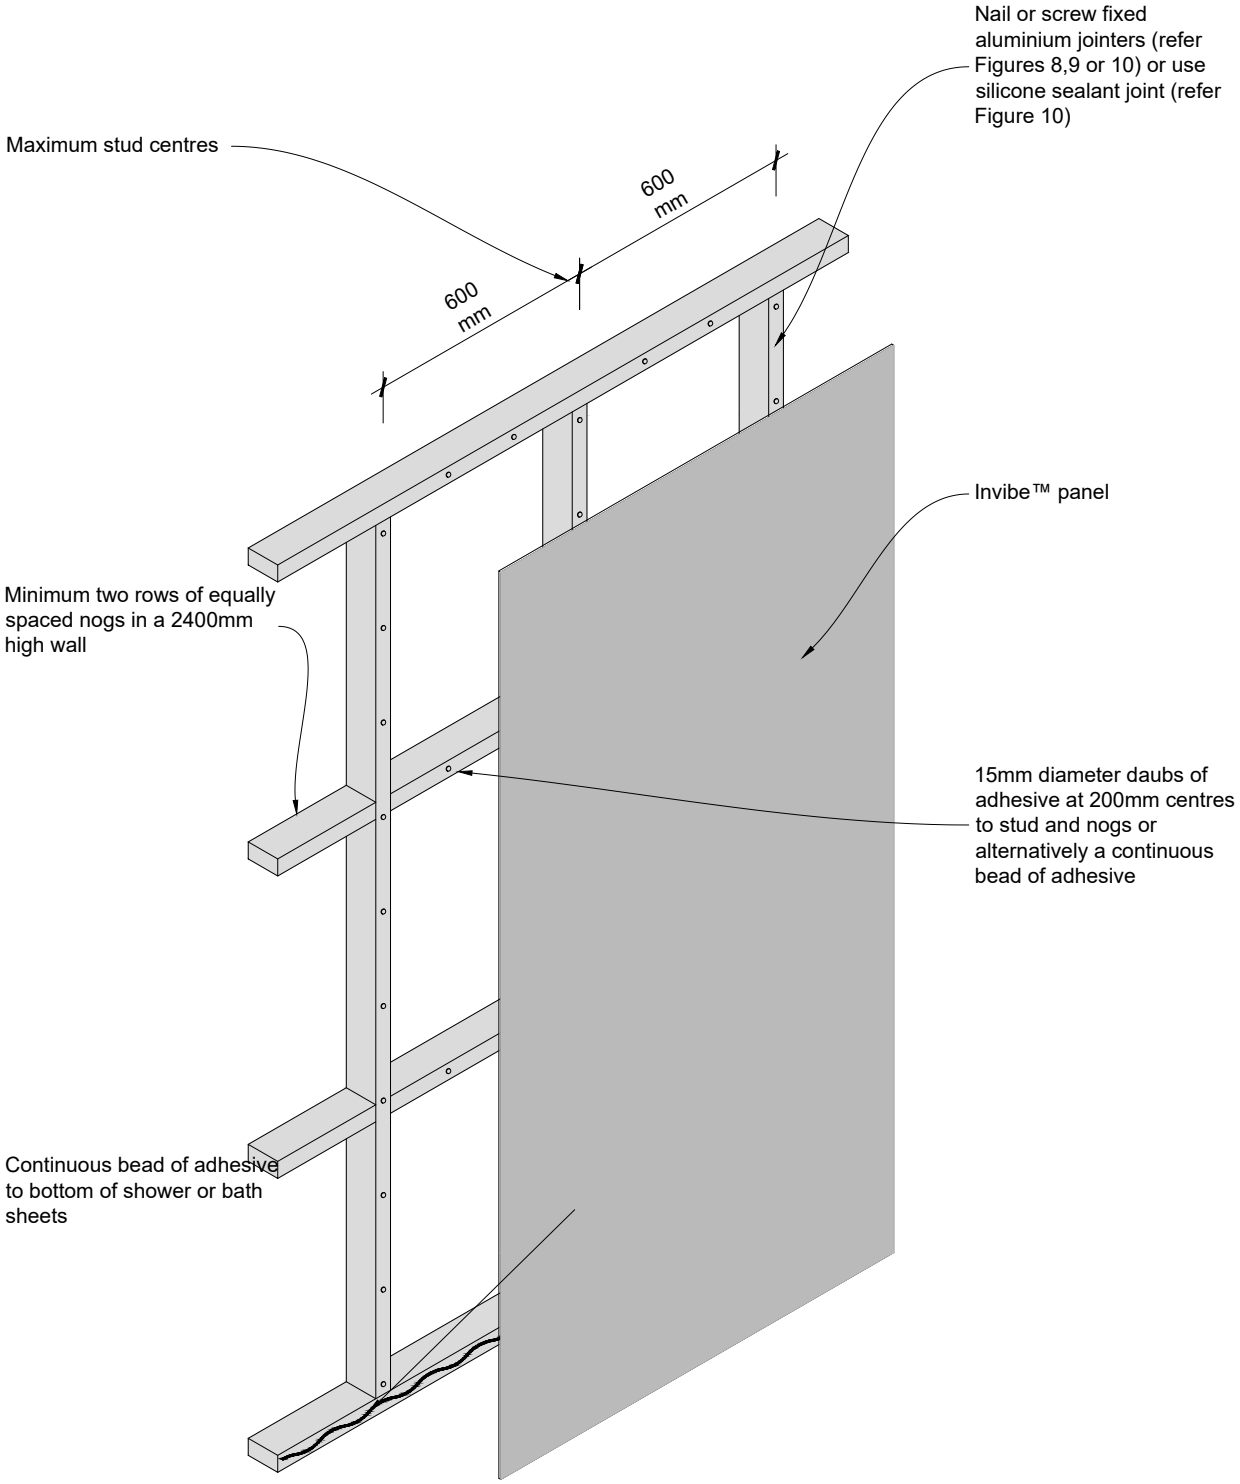
Nail or screw fixed aluminium jointers (refer Figures 8,9 or 10) or use silicone sealant joint (refer Figure 10)
Maximum stud centres
600 mm
600 mm
Invibe™ panel
Minimum two rows of equally spaced nogs in a 2400mm high wall
15mm diameter daubs of adhesive at 200mm centres to stud and nogs or alternatively a continuous bead of adhesive
Continuous bead of adhesive to bottom of shower or bath sheets