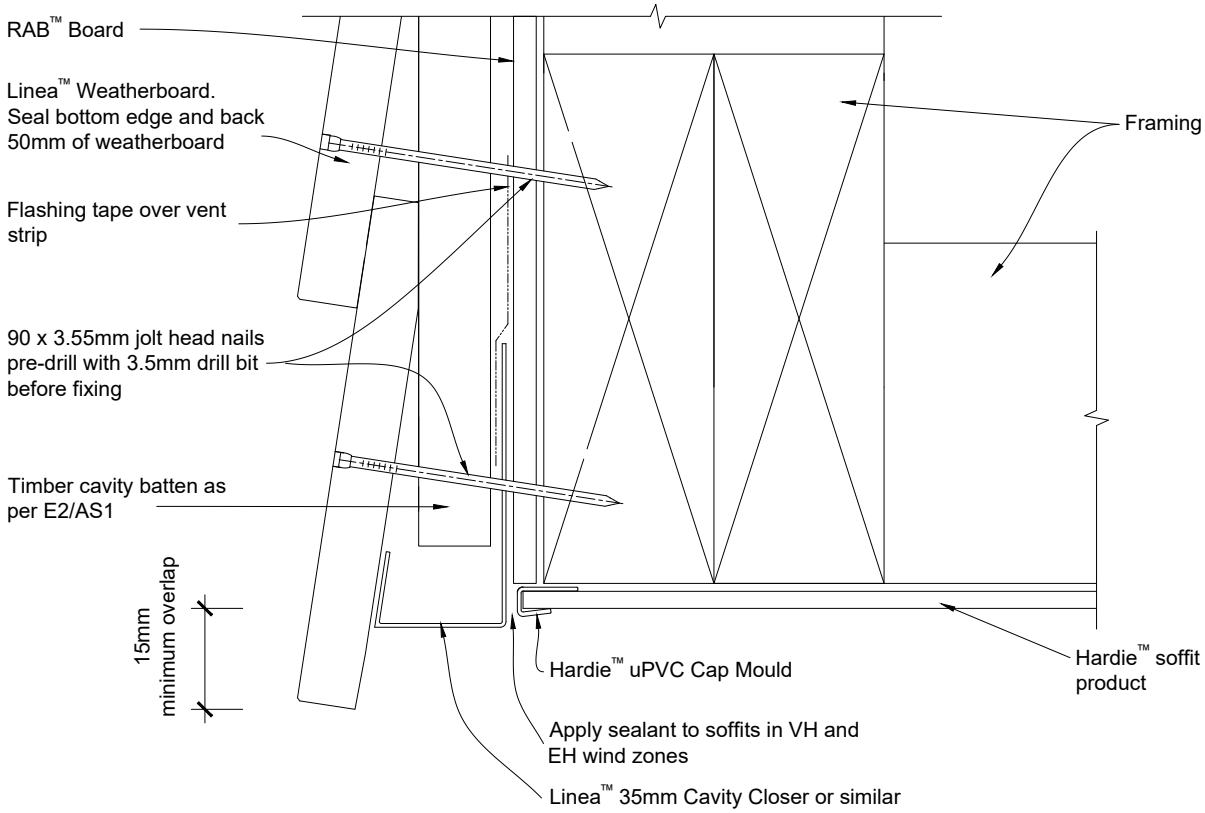
RAB™ Board
Linea™ Weatherboard.
Seal bottom edge and back
50mm of weatherboard
Flashing tape over vent
strip
90 x 3.55mm jolt head nails
pre-drill with 3.5mm drill bit
before fixing
Timber cavity batten as
per E2/AS1
15mm
minimum overlap
Framing
Hardie™ uPVC Cap Mould
Hardie™ soffit
product
Apply sealant to soffits in VH and
EH wind zones
Linea™ 35mm Cavity Closer or similar